








RISE & RECLINE CHAIR

Assembly Instructions

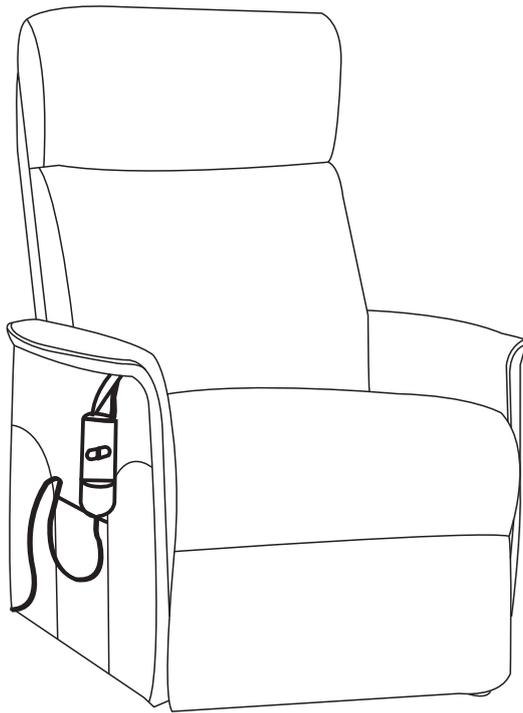




No Extra
Tools Required

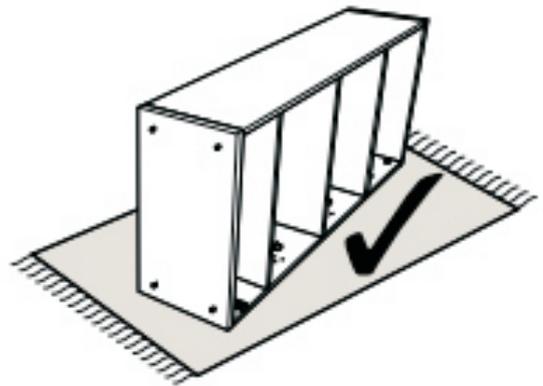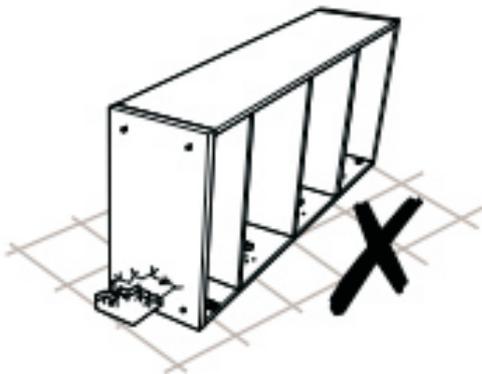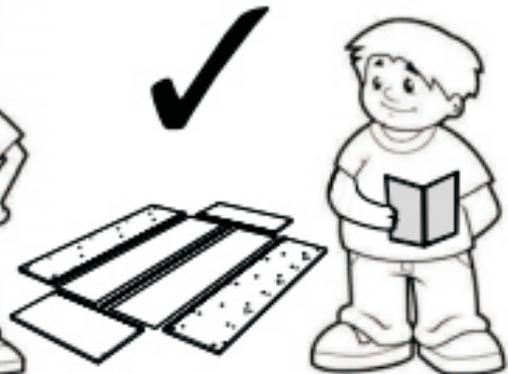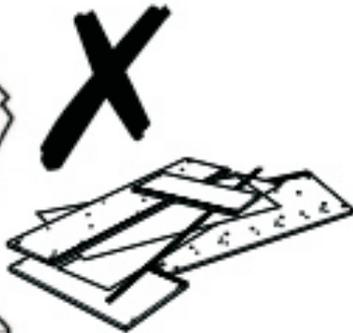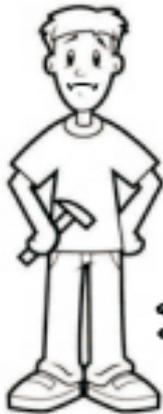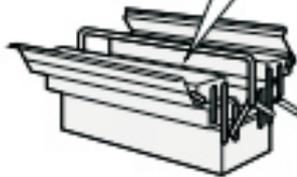

CUSTOMER SERVICE

01623 727374

PARTS

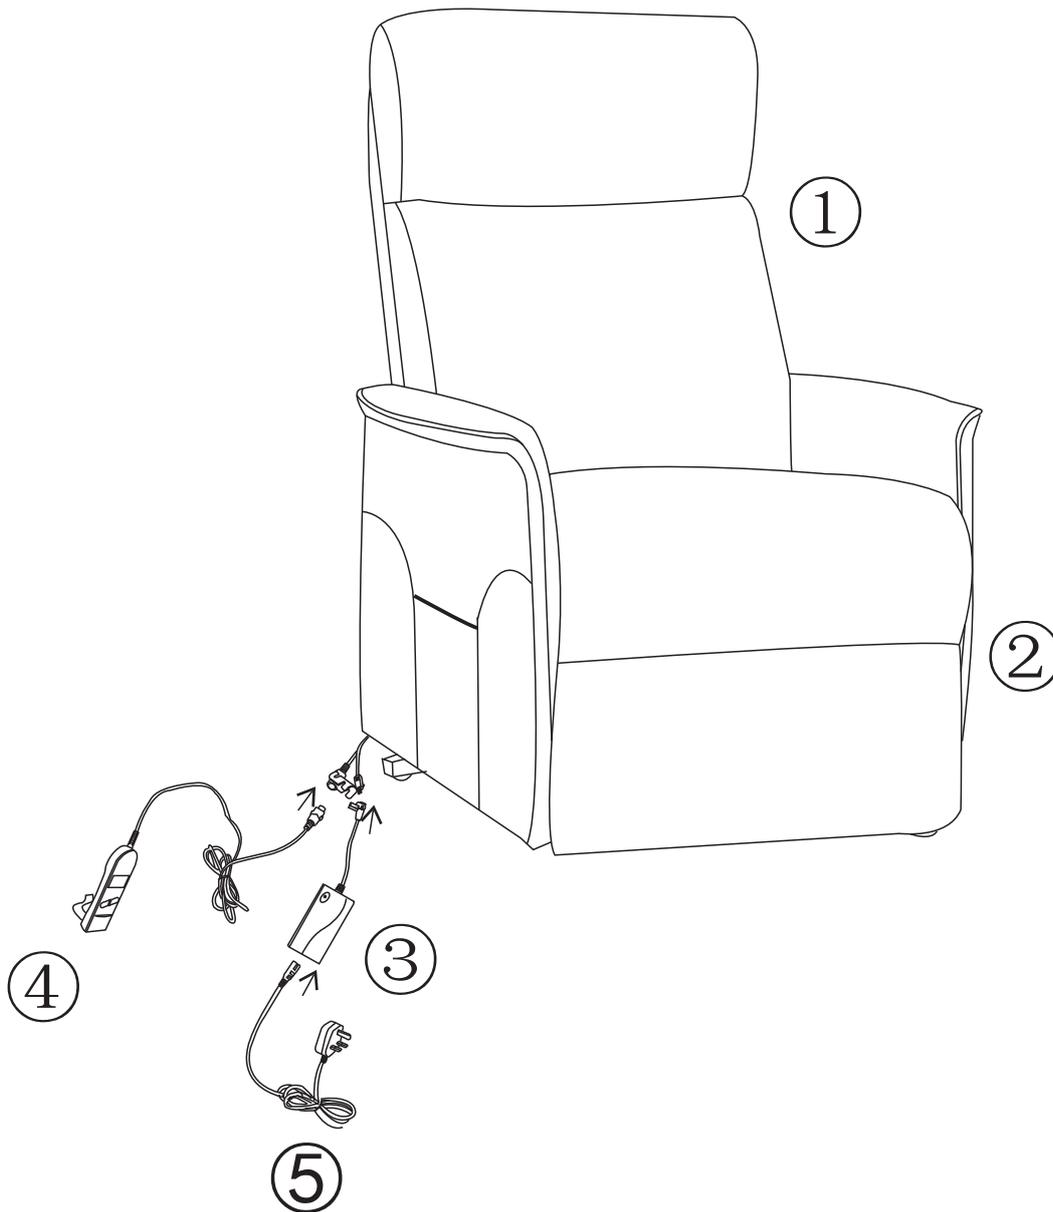

Safety Advice

Please take the time to carefully read through the whole of these instructions before you commence.

Keep these instructions for future reference.

Unpack, inspect and check off all of the contents.

Please dispose of all packaging safely.

Small component parts could choke a child if swallowed.

We strongly recommend that you keep children well away from the work area.

It would be sensible to lay a sheet or blanket on the floor where you intend to work to avoid scratching this product and to protect your floor.

This product is heavy. Take extreme care when lifting to avoid personal injury or damage to the product.


Assemble the product as close to its intended final position in the room as possible.

HANDY HINT: If you keep the hardware in a bowl during assembly you will be less likely to lose them.


Important Notice:

This chair is not suitable for use by persons over 18 stones (115kg) in weight.


1

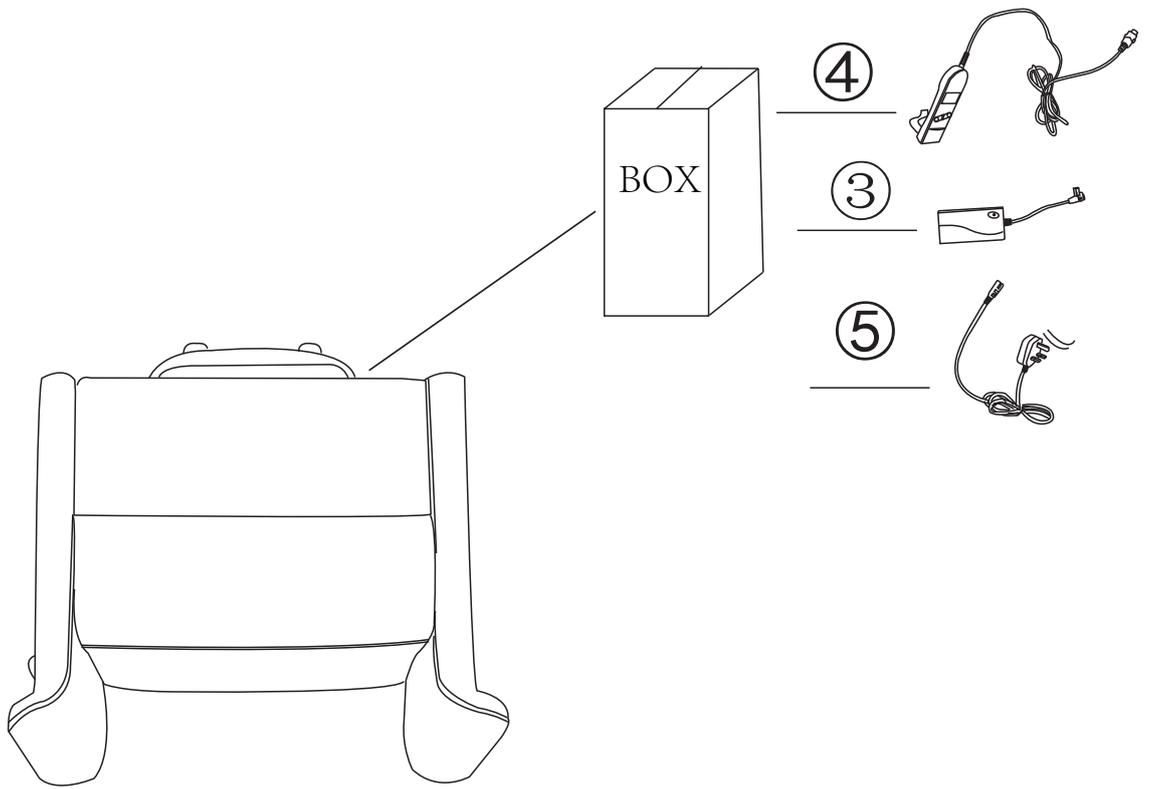


2

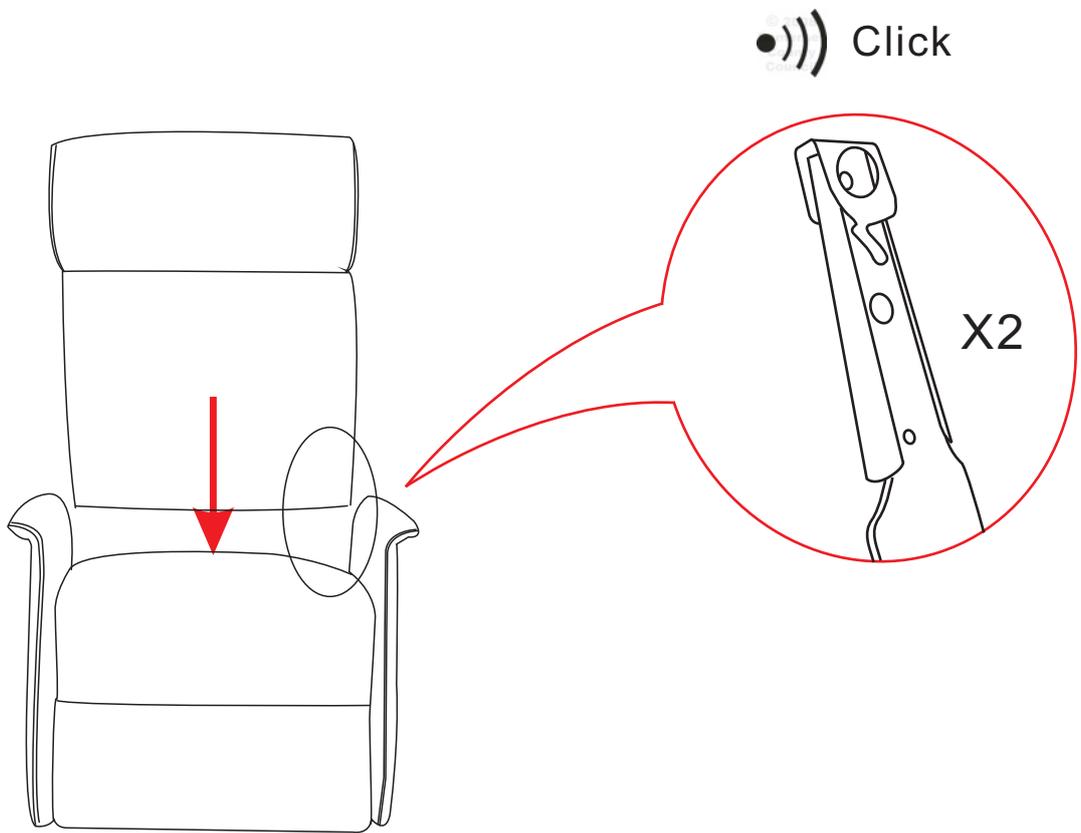


3

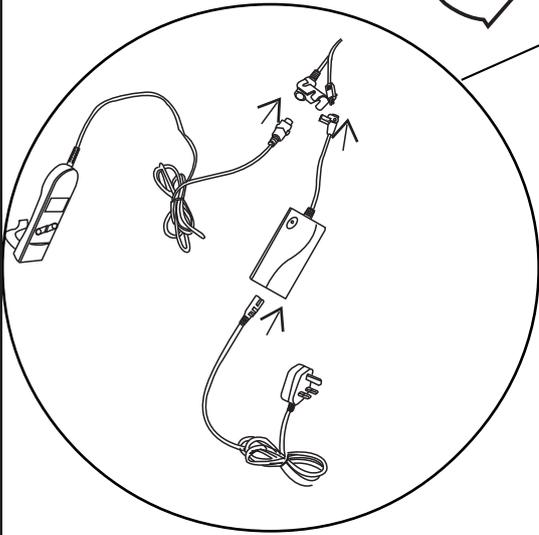

4

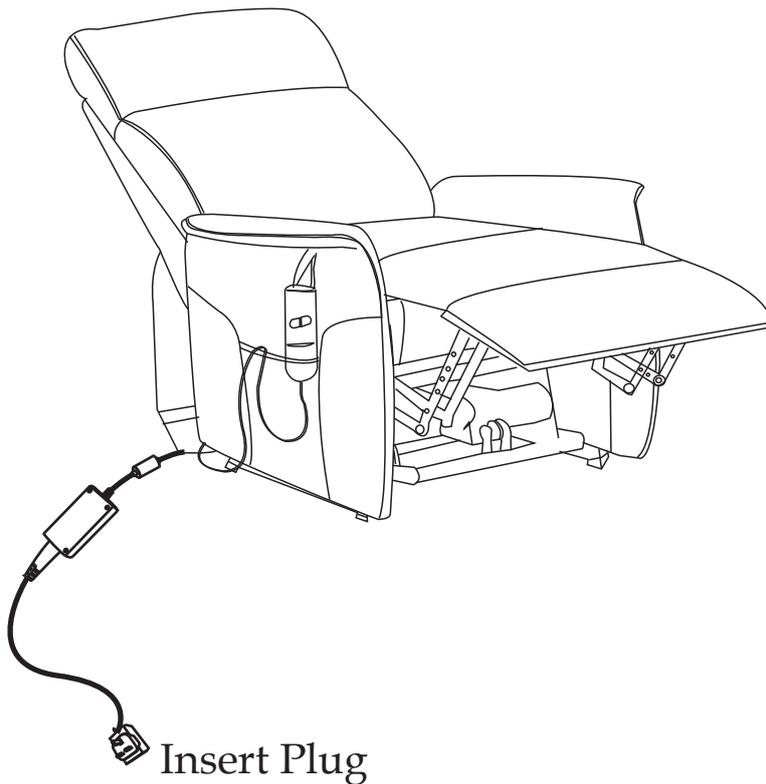

5

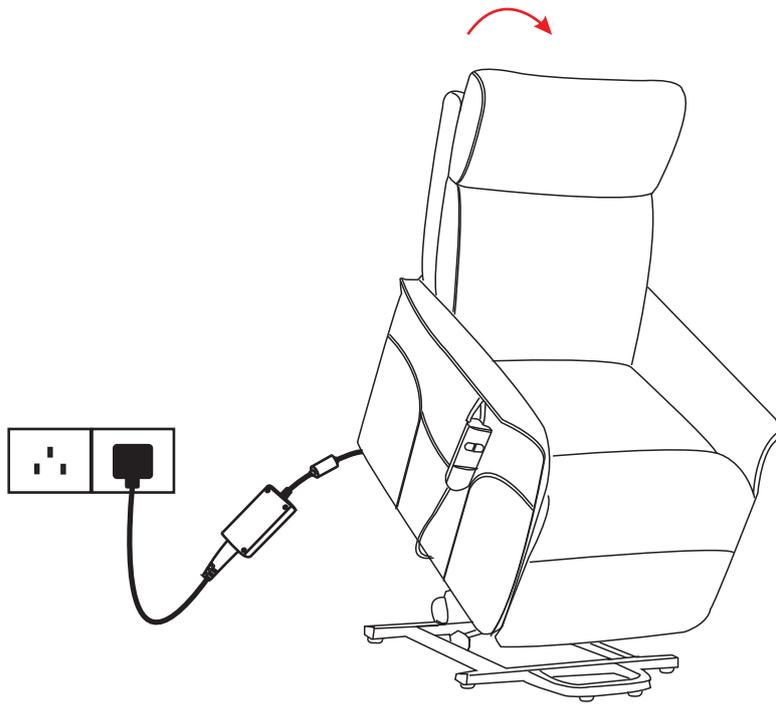

Your Rise & Recline Chair is now ready for use.

Care and Maintenance

Storage:

Keep the recliner chair dry and clean. Use a dust sheet to protect the recliner chair if it will not be used for a long period.

Do not expose the recliner chair to strong sunlight or high temperatures as this could cause the fabric to fade.

Do not put any heavy articles on to the armrests as this could damage the recliner chair and/or cause it to become unstable.

Cleaning:

Do not rub the surface of the recliner chair with hard or coarse objects.

Use a damp cloth to clean the fabric upholstery and steel frame then wipe over with a dry cloth to remove any moisture.

Only use a dry cloth to wipe the handset.

Fair Wear and Tear Policy

Your new recliner chair is covered by a 12 month manufacturers warranty. This warranty does not cover the following:

Damage from misuse, and use over the specified weight limit.

Material fading over time or through sunlight.

Damage from spills or leaks.

Collision damage (rubbing against walls, etc).

Accidental tears and damage.

Cigarette and match burns.



Disposal and the environment

This product is covered by the waste electrical and electronic equipment (WEEE) regulations. It should not be discarded with normal household waste, but taken to your local collection centre for recycling. For further information, please contact the local authority or approved disposal agency.

General Care

Avoid the use of all household cleaners and abrasives. When moving your furniture, carefully lift into place. Never drag or push the pieces across the floor as this will cause damage to the joints and could result in failure to the product that will invalidate the warranty.

Recommendations

Periodical re-tightening of fixings.

Warning

This unit is heavy. Please use an assistant when lifting.

Notes

We've tried to make this piece of furniture as easy to assemble as possible.

In the unlikely event that you have problems putting it together or have damaged or missing pieces, please contact our customer services on 01623 727374

General Safety Advice

WARNING: This is an electrical item and should be treated with caution. It is for indoor use in a dry environment only

WARNING: The user is at risk if the chair is not correctly specified at time of purchase.

WARNING: Before first use ensure all packaging and covering materials have been removed. Locate the chair on a flat, stable surface.

WARNING: Ensure the mains cable is not a trip hazard and that excess cable is NOT stored under the chair.

WARNING: Always ensure that there is nothing to obstruct the free movement of the chair, for example children or pets, or solid objects: e.g.: a wall.

WARNING: The chair is not suitable for use by children. Any children in the vicinity must be supervised at all times.

WARNING: Before first use, the chair should be tested to ensure that all functions are working correctly.

WARNING: Exercise care when lowering into the chair as shock loads can severely damage the chair and the mechanism

WARNING: Always move the chair unoccupied and unplugged from the mains socket.

WARNING: Avoid sitting on the arms as this can cause damage to the armrests

WARNING: Do not use this chair with users who exhibit violent behaviour.