

ASSEMBLY INSTRUCTIONS

90CM CABIN BED


Approximate Assembly Time



People Required to Assemble



Tools Required

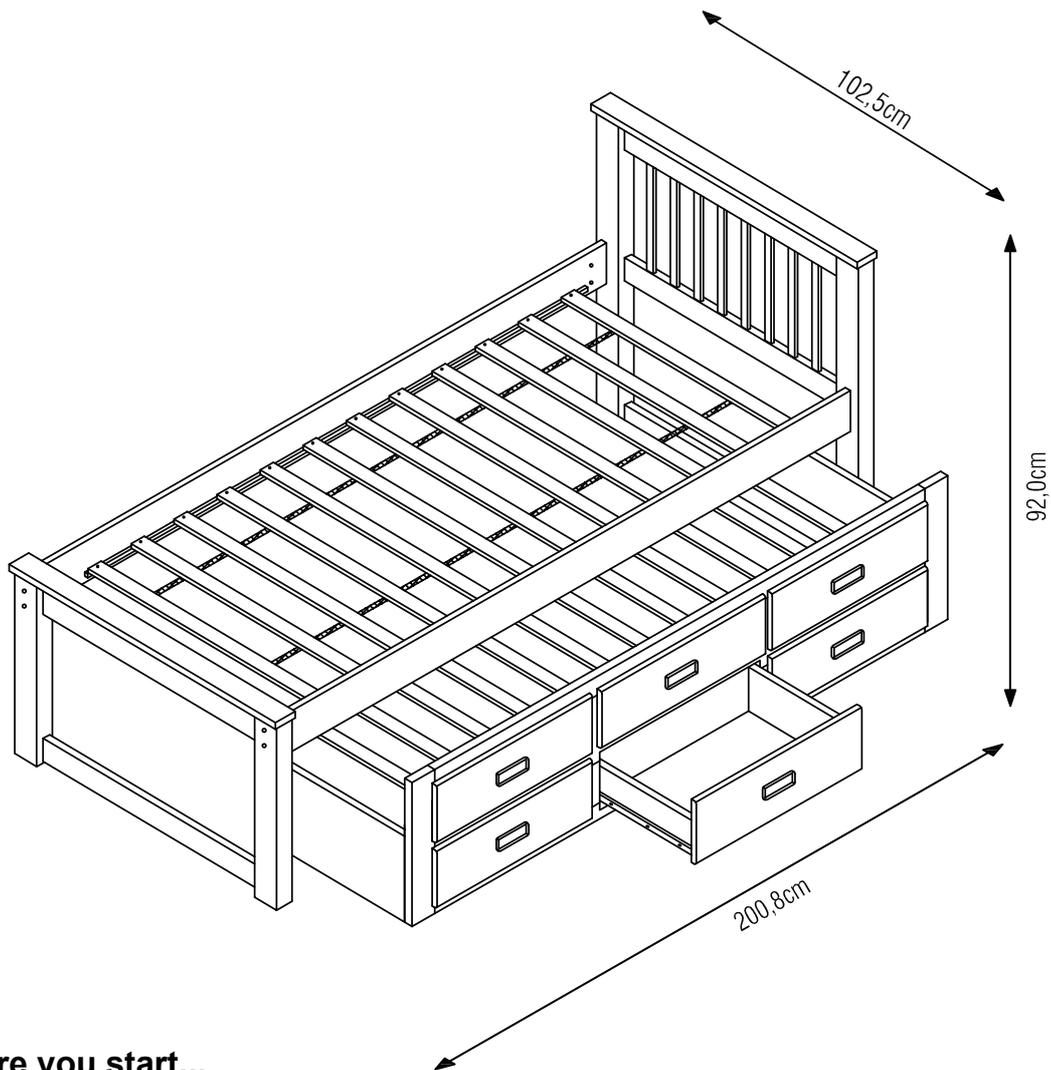




Before you start...

Please carefully unpack and lay out all of the component parts to ensure nothing is missing and to check each component for any obvious damage.





Should you identify any concerns at this stage please contact the retailer from whom this product was purchased. Please quote your order number, details of your issue, the product code, and the batch number from the cartons which will help to resolve your issue as quickly as possible.

Version Number -1.0

Product Code - MAI901/MAI902/MAI903

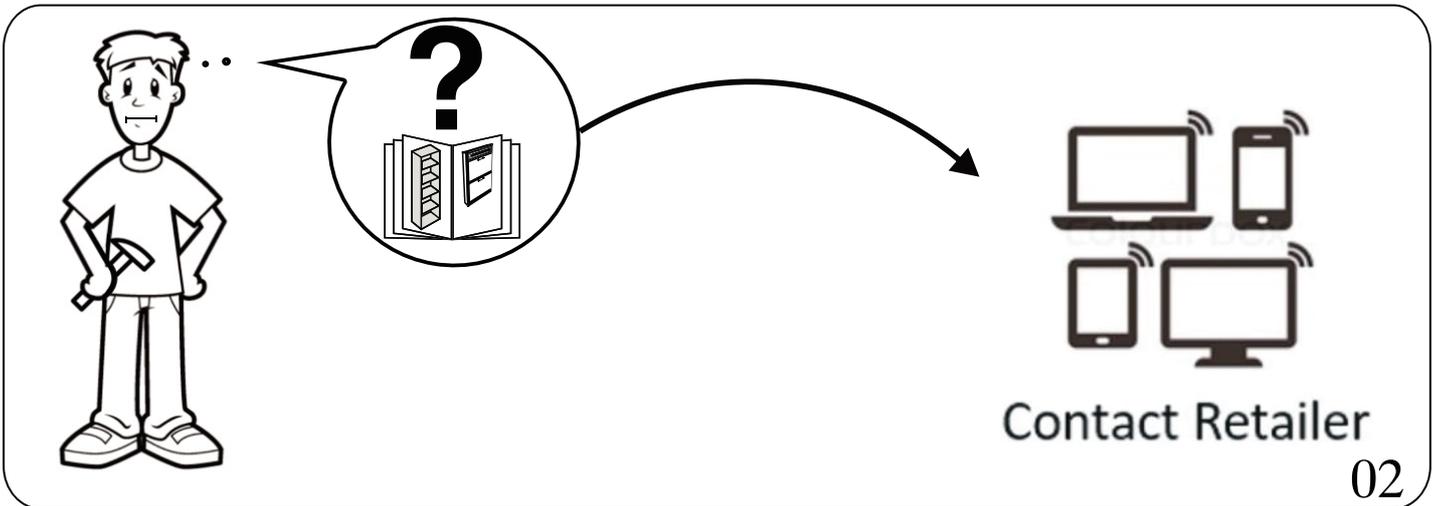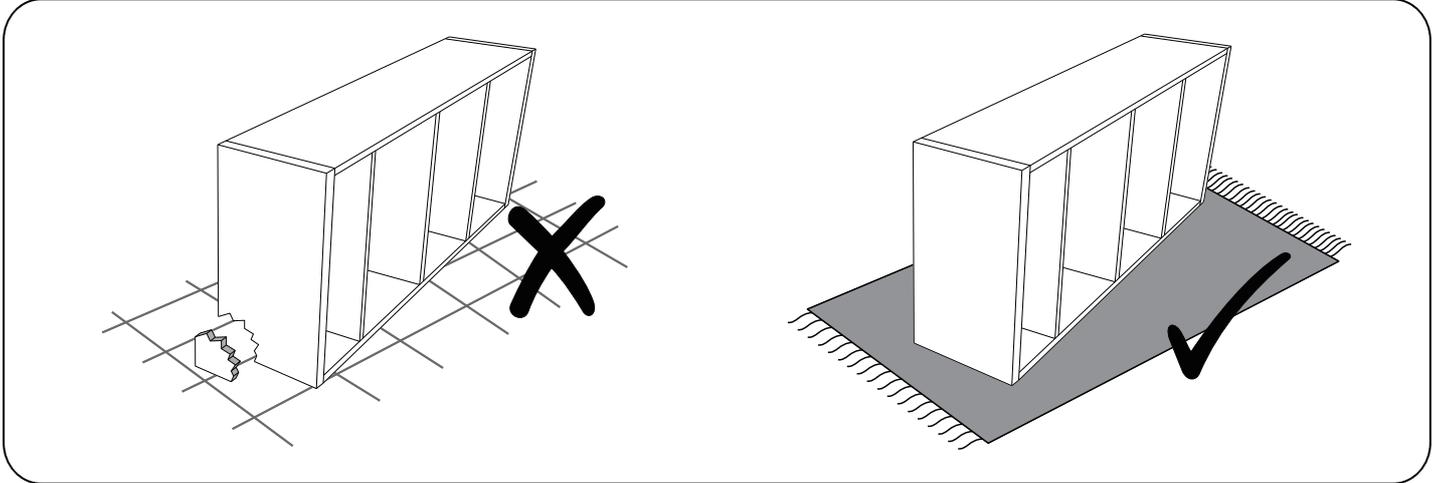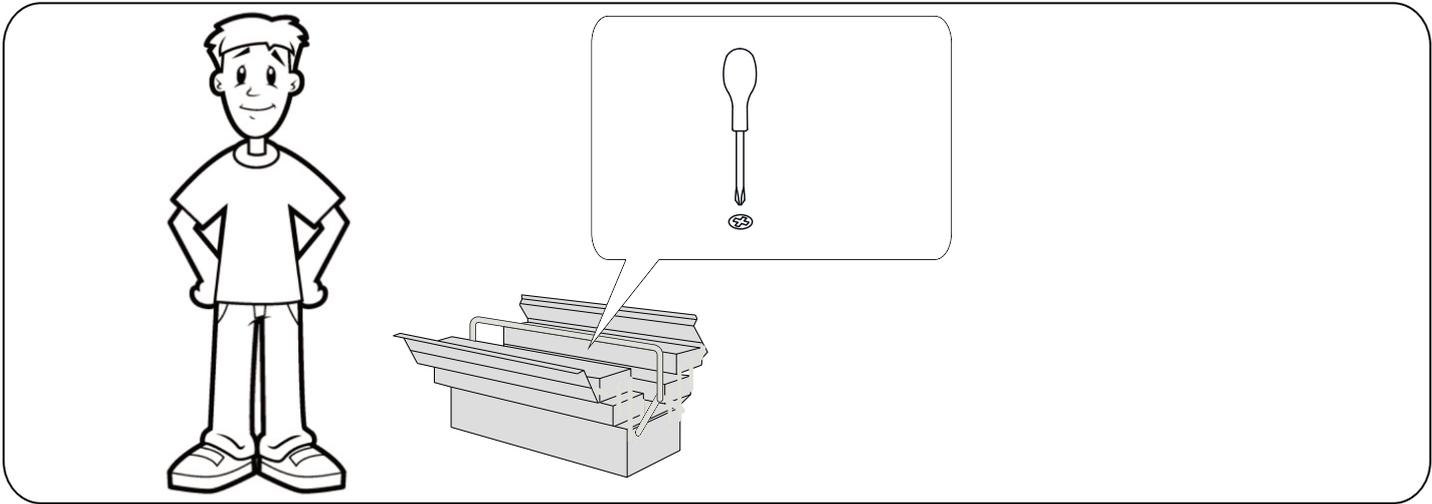

Please check all hardware matches the list below. Should you notice any are missing please contact your retailer.


<p>JCBC M6x70mm AX8</p> 	<p>Barrel Nut Ø10x13mm BX8</p> 	<p>Wood Dowel Ø8x30mm CX12</p> 	<p>JCBC M6x45mm DX8</p> 
<p>Sliderrail-A EX6</p> 	<p>Sliderrail-B FX6</p> 	<p>JCBC M6x30mm GX16</p> 	<p>Caster H=65mm HX4</p> 
<p>Csk Ø3.5x16mm IX52</p> 	<p>Csk Ø4x40mm JX18</p> 	<p>Allen Key 4mm KX1</p> 	<p>Csk Ø4x30mm LX48</p> 
<p>Block 65.7x30x20mm MX2</p> 	<p>Block 62.3x30x20mm NX2</p> 	<p>Barrel Nut Ø9x10mm OX12</p> 	<p>Connecting Bolt Ø5x40mm PX20</p> 
<p>Minifix Housing Ø15x12mm QX20</p> 	<p>Pad 40x20mm RX4</p> 		

We strongly advise that you do not use Power Tools, such as drills or electric screwdrivers during the assembly as this may cause irreparable damage and will invalidate your warranty.



Do Not Use Power Tools

PARTS

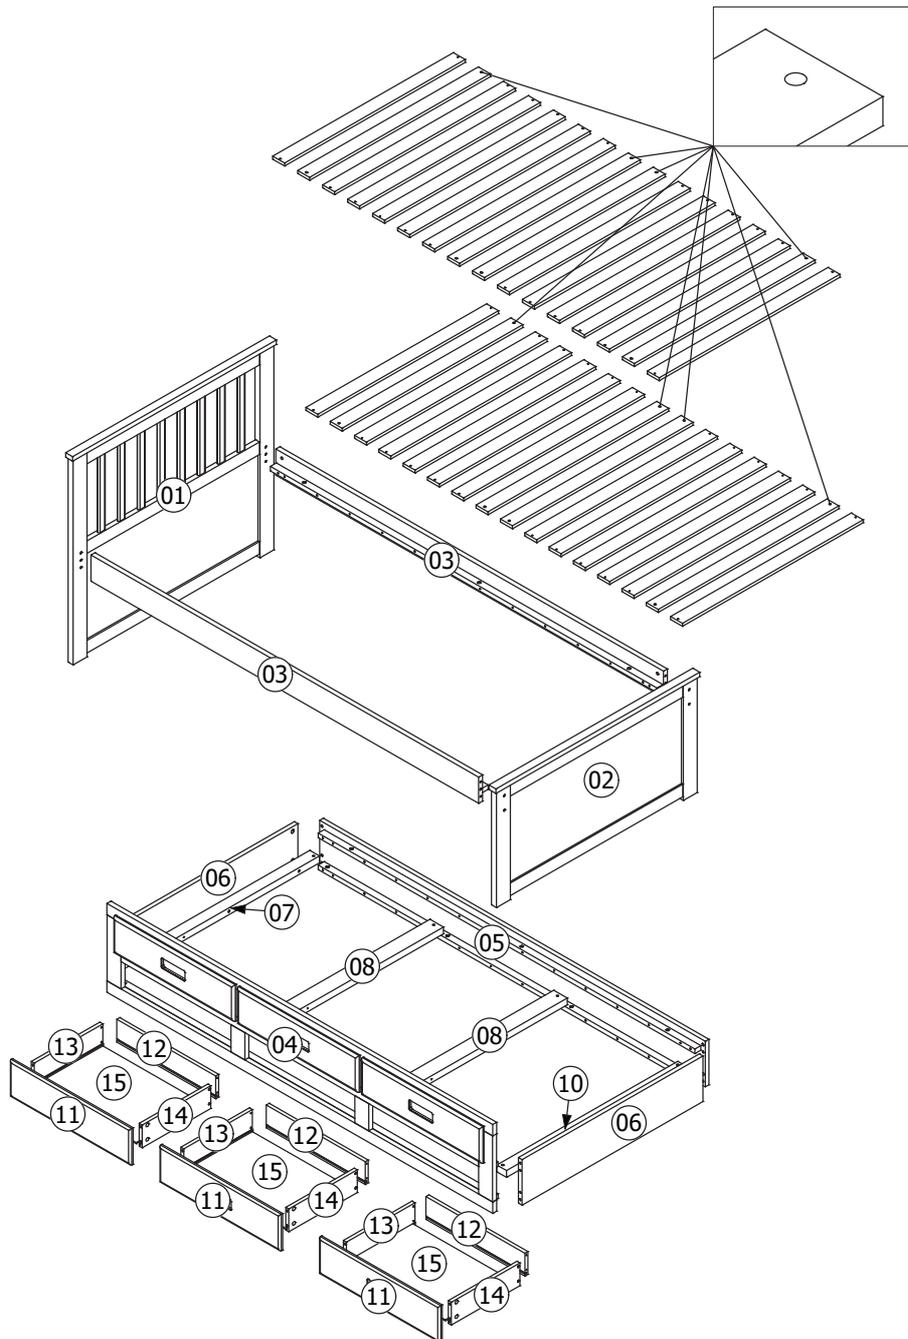

Please ensure you carefully check all the pieces, should you have any concerns please contact the retailer before assembly commences. Please have your order number, detail of the issue, the product code, and the batch number from the cartons as this will help us to resolve your issue much faster.

ASSEMBLY ADVICE

Please take the time to carefully read through these instructions before you commence.

Keep these instructions for future reference.

We advise that the product is assembled in the room it is intended for.

We advise that you keep the hardware in a bowl during assembly to avoid losing anything.

We strongly recommend that you keep children away from the work area.

Small component parts could choke a child if swallowed.

We recommend you use a sheet or blanket to protect both floor and product through the assembly stages.

This product is heavy, and we recommend a 2 person lift to avoid personal injury or damage to the product.

Never push or pull the product as this could cause both personal injury or irreparable damage to product or floor.

We have tried to make this piece of furniture easy to assemble if the instructions are followed carefully.

In the unlikely event that you have problems with assembling the product or have missing or damaged parts, please contact your retailer and we will assist them in rectifying the problem as quickly as possible.


Please remember we strongly urge you **DO NOT** use power tools such as drill or electric screwdrivers as this could cause irreparable damage to your product and will invalidate your warranty.




Do Not Use Power Tools

01

Wood Dowel Ø8x30mm
 C
12

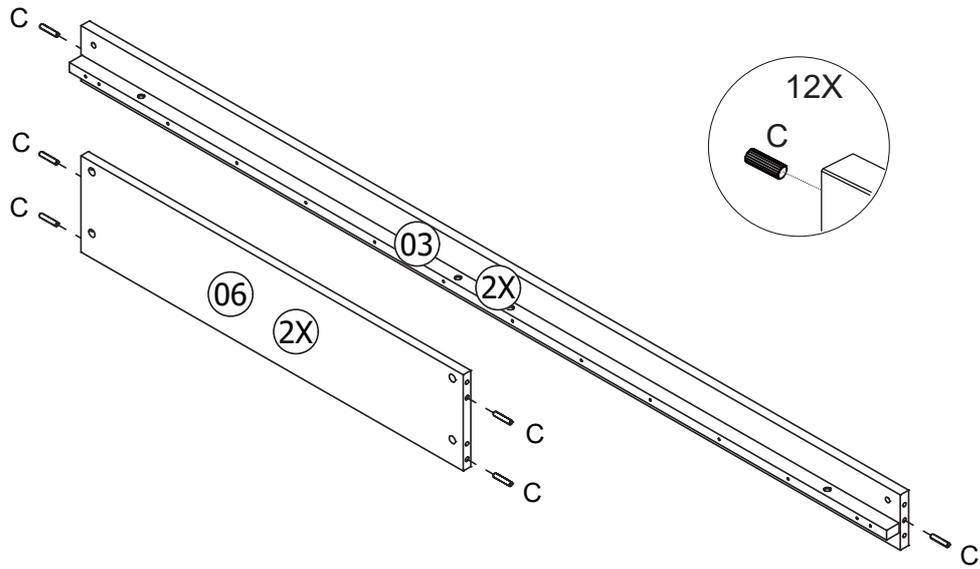


02

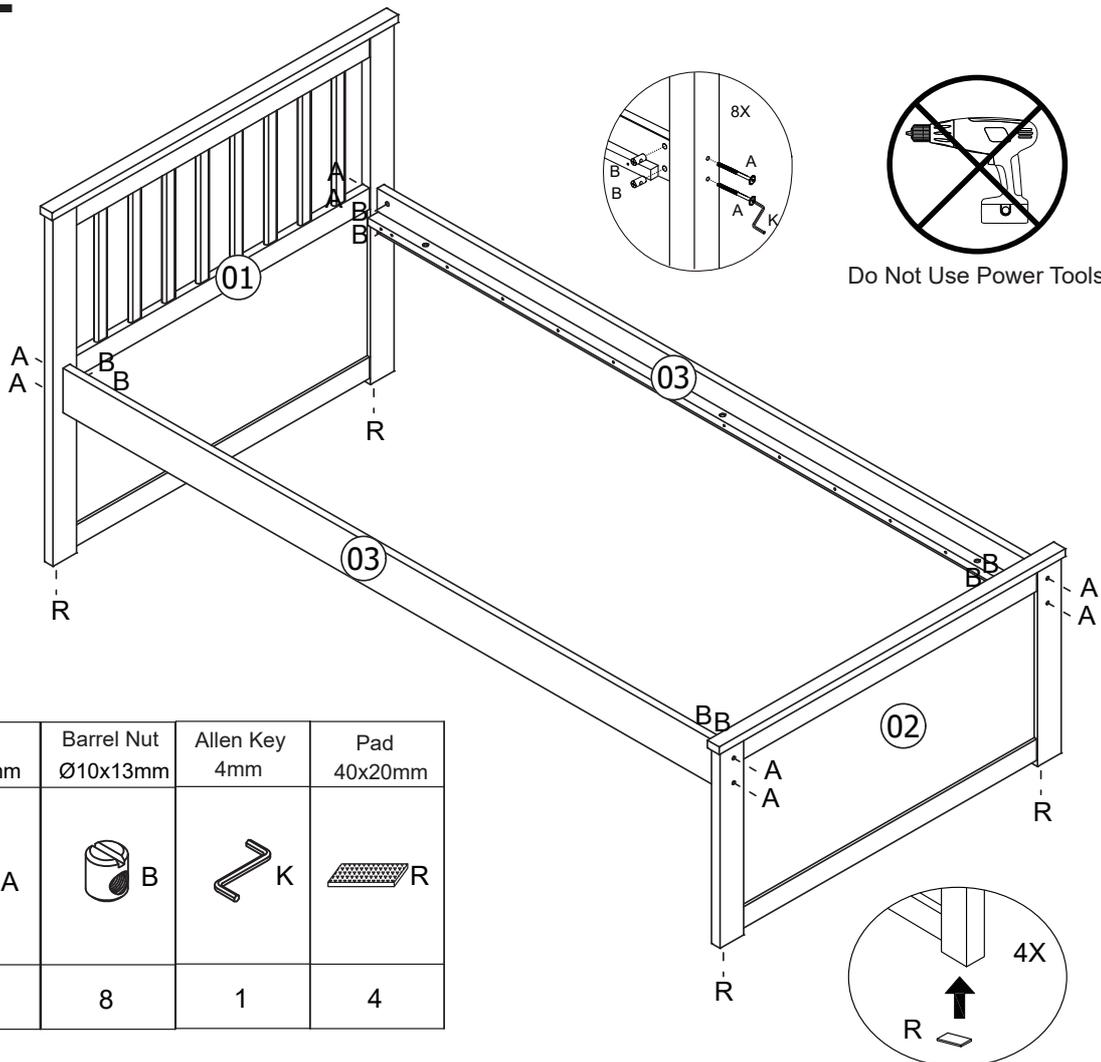

Do Not Use Power Tools

JCBC M6x70mm	Barrel Nut Ø10x13mm	Allen Key 4mm	Pad 40x20mm
 A	 B	 K	 R
8	8	1	4

03

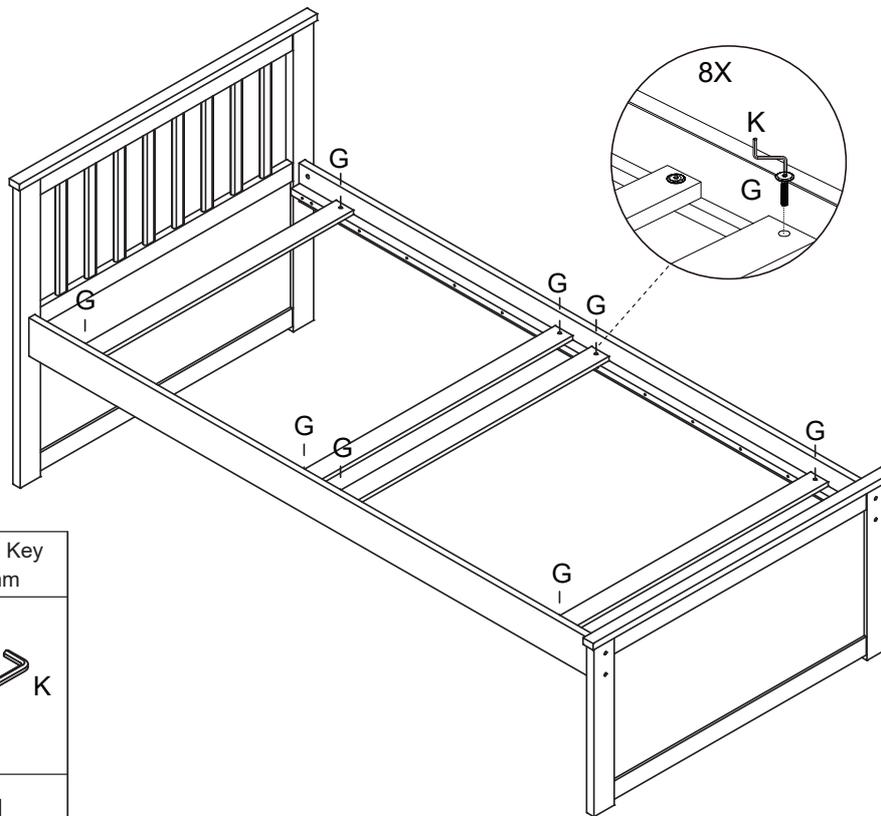


JCBC M6x30mm	Allen Key 4mm
 G	 K
8	1




Do Not Use Power Tools

04

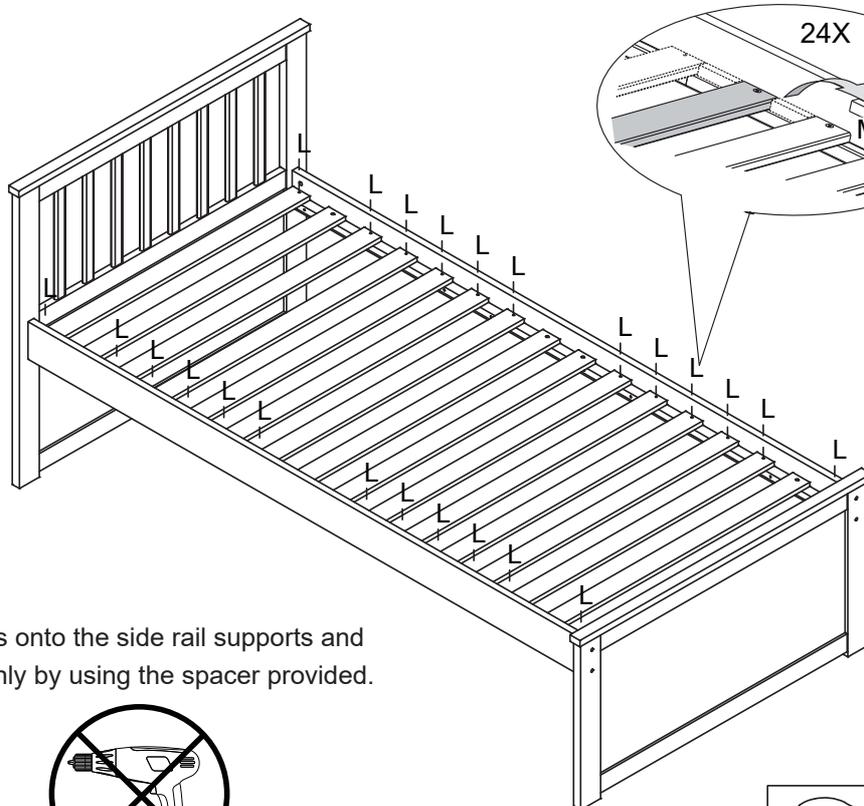


Csk Ø4x30mm
 L
24

Block 65.7x30x20mm
 M
2

Place the slats onto the side rail supports and distribute evenly by using the spacer provided.




Do Not Use Power Tools




07

05


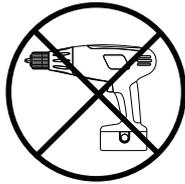


Do Not Use Power Tools

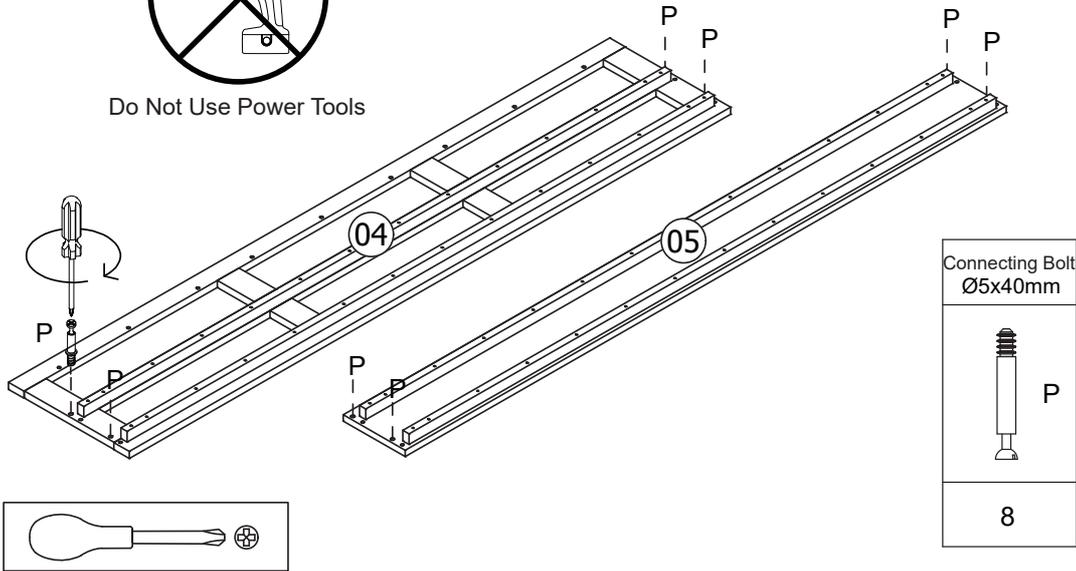

Connecting Bolt Ø5x40mm
 P
8


06

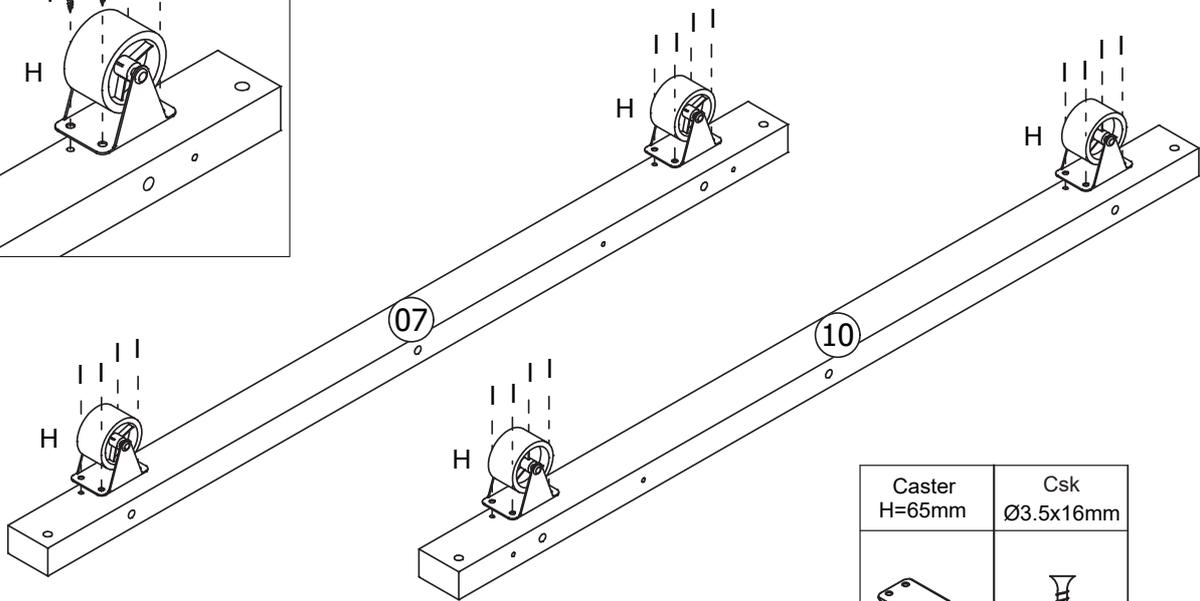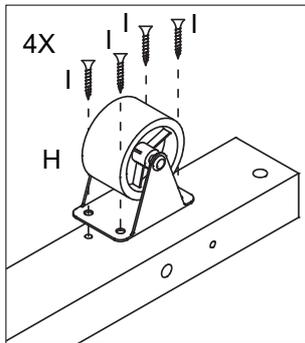

Caster H=65mm	Csk Ø3.5x16mm
 H	 I
4	16





Do Not Use Power Tools




08

07

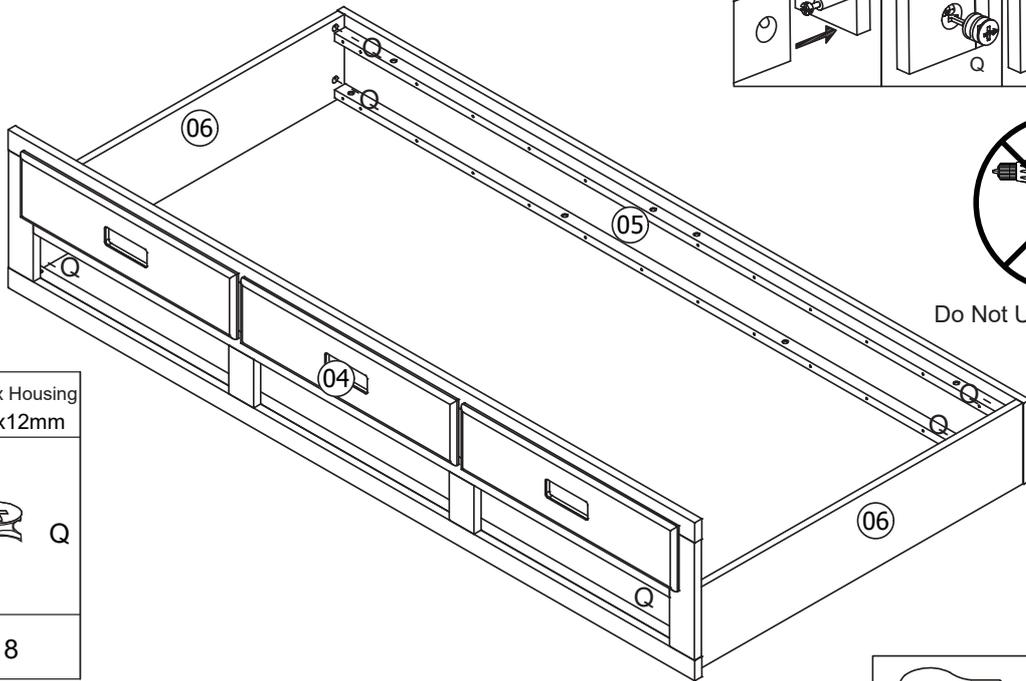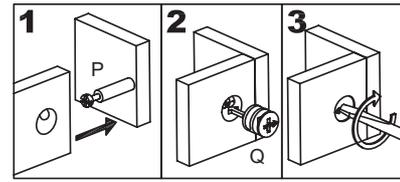


Do Not Use Power Tools


Minifix Housing Ø15x12mm
Q
8



08

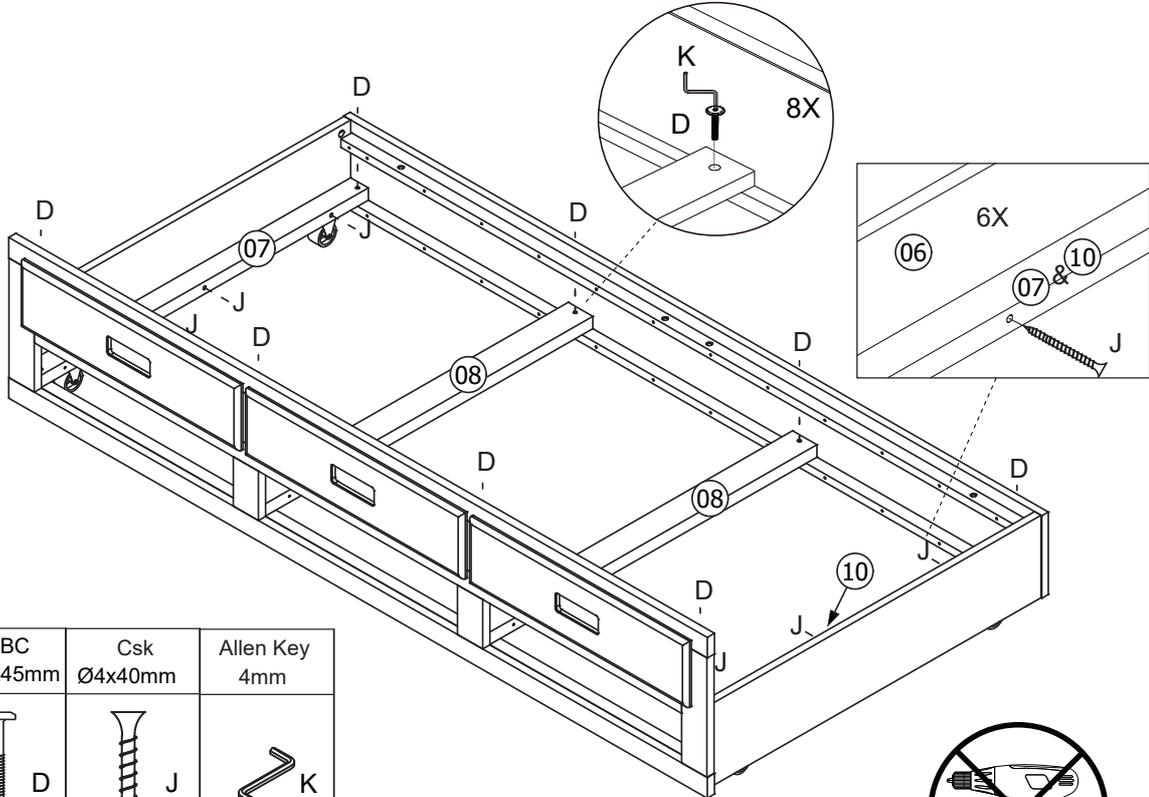

JCBC M6x45mm	Csk Ø4x40mm	Allen Key 4mm
D	J	K
8	6	1








Do Not Use Power Tools 09

09




Do Not Use Power Tools

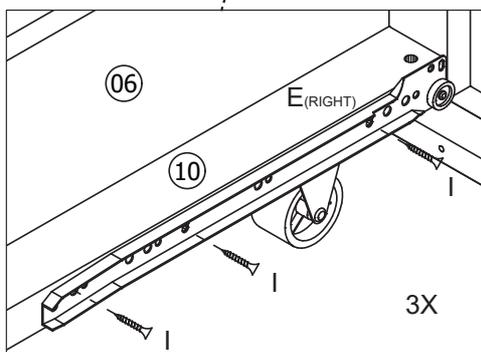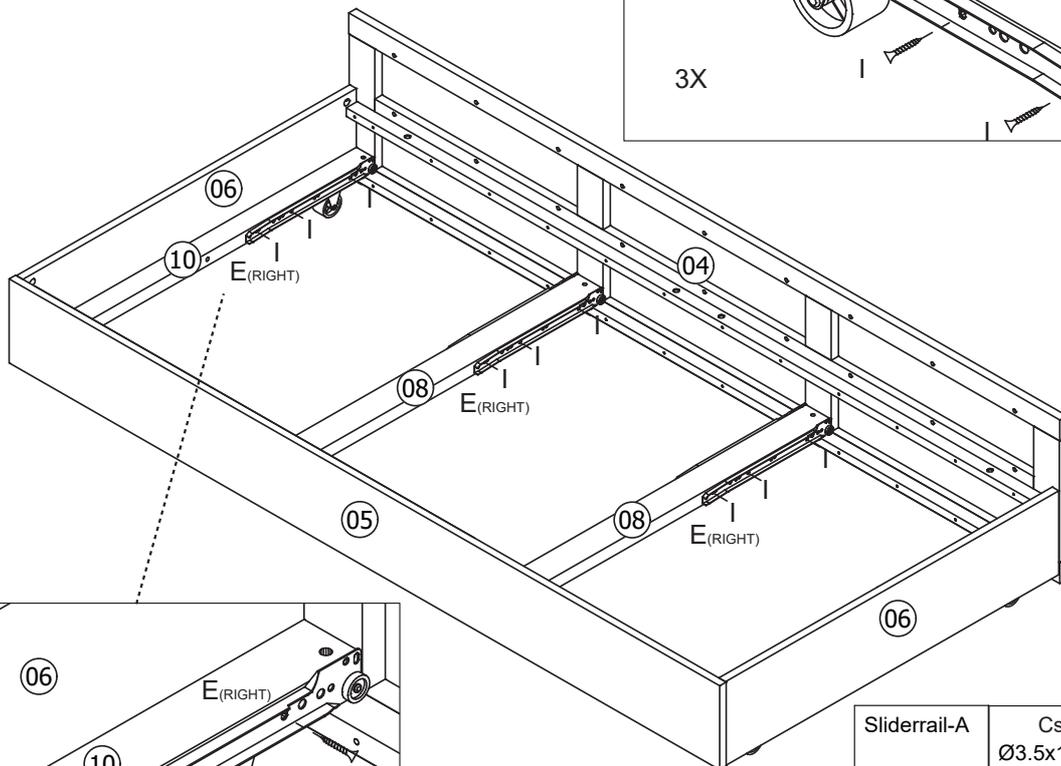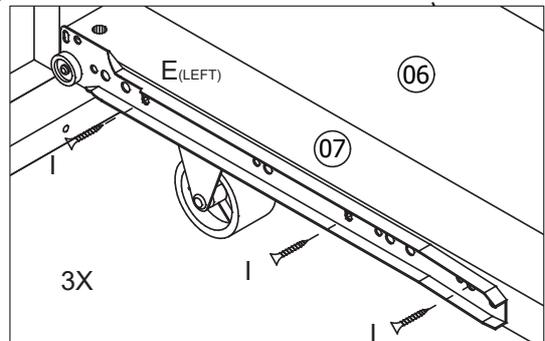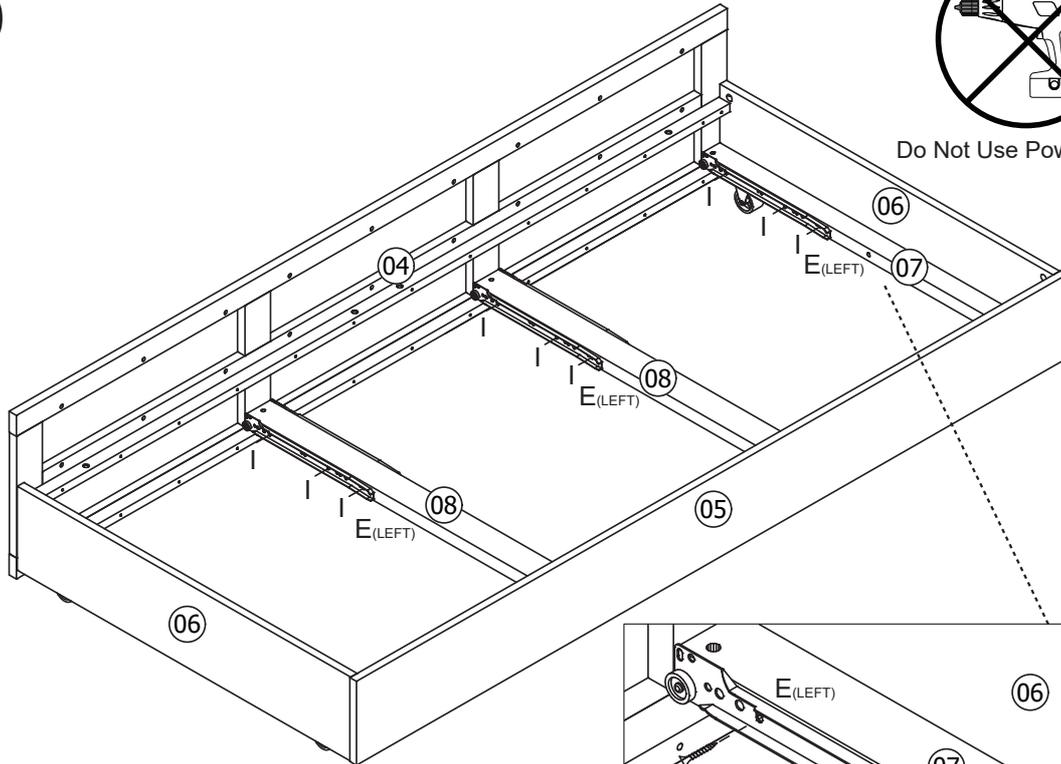


Sliderrail-A	Csk Ø3.5x16mm
LEFT RIGHT E	I
6	18

10

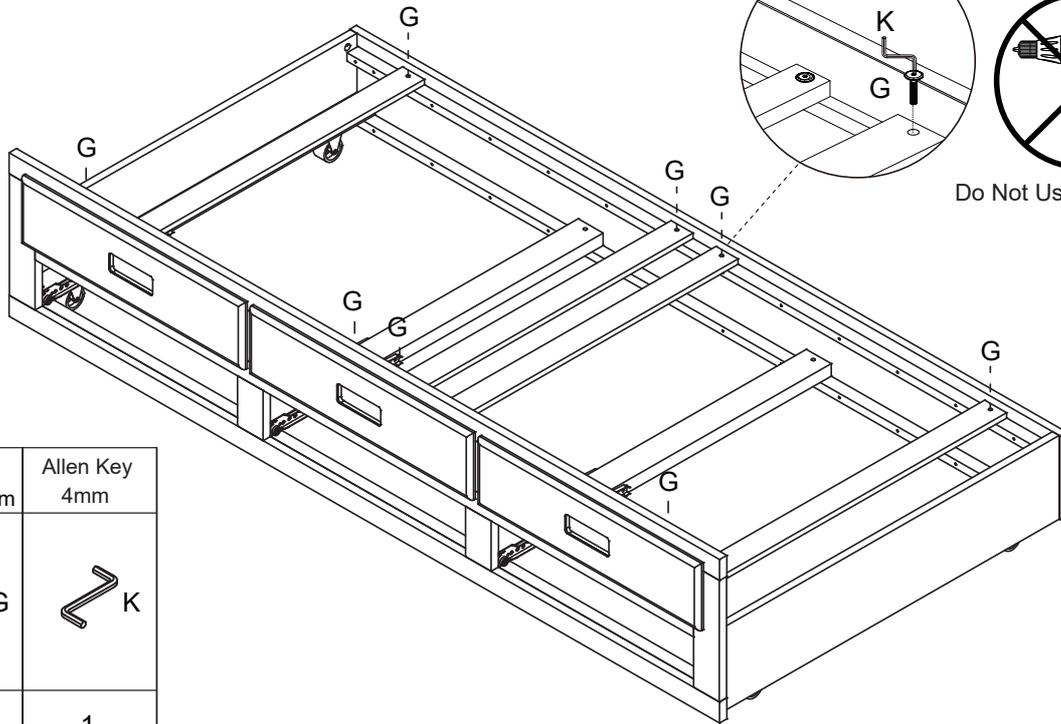

JCBC M6x30mm	Allen Key 4mm
 G	 K
8	1

11

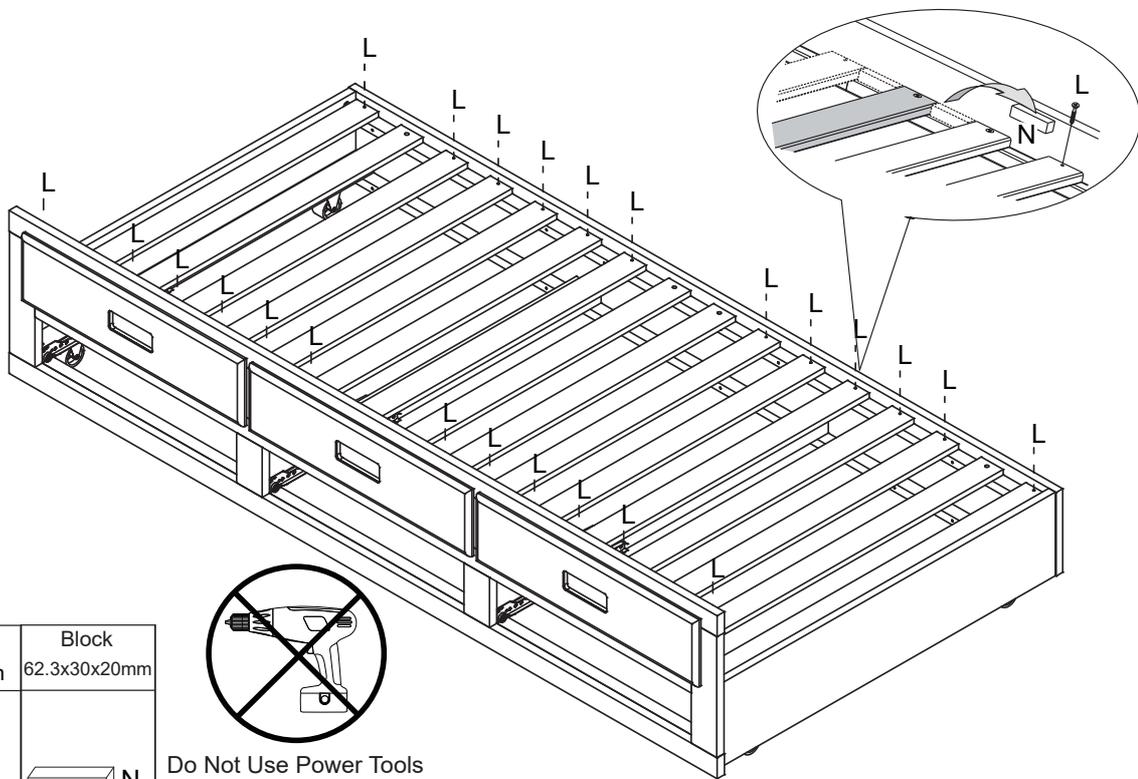


Csk Ø4x30mm	Block 62.3x30x20mm
 L	 N
24	2

Do Not Use Power Tools






Place the slats onto the side rail supports and distribute evenly by using the spacer provided.



12







Do Not Use Power Tools

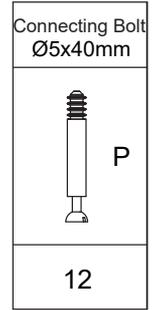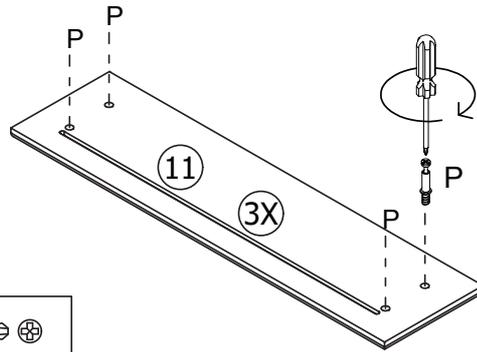

13




Do Not Use Power Tools

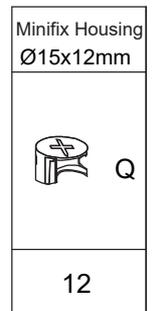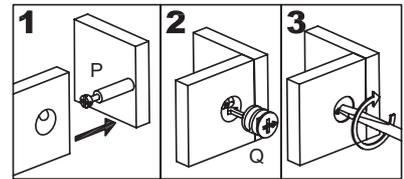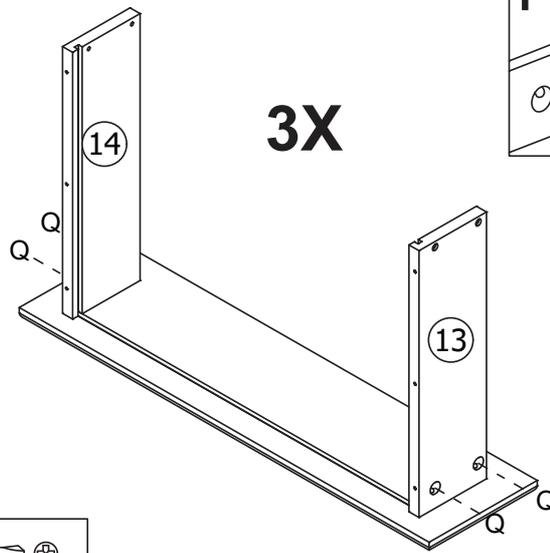

14





Do Not Use Power Tools

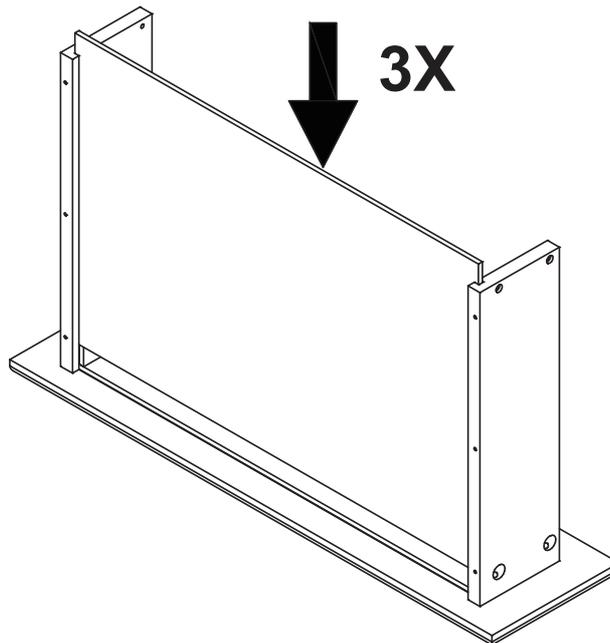




15

Csk Ø4x40mm	Barrel Nut Ø9x10mm
 J	 O
12	12

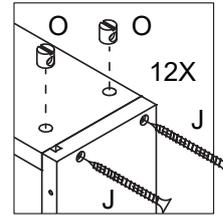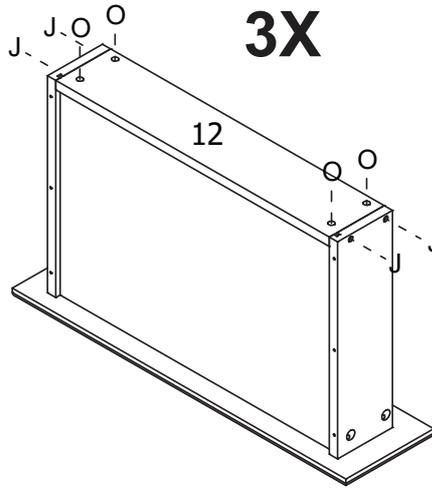

Do Not Use Power Tools


16

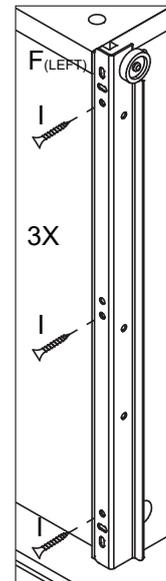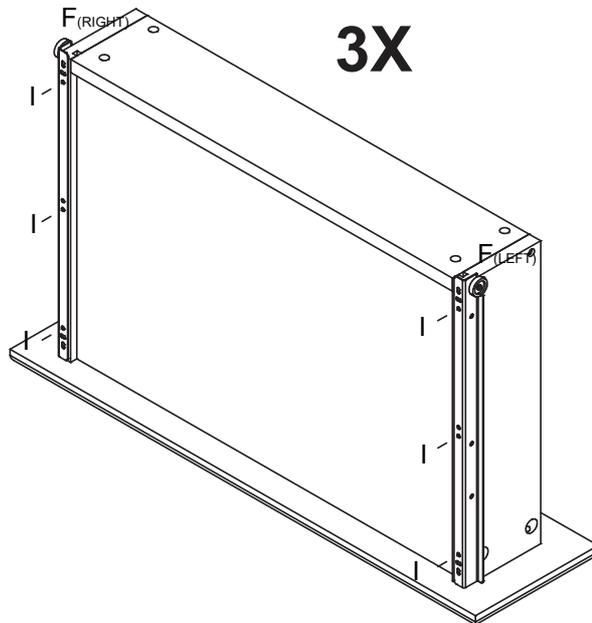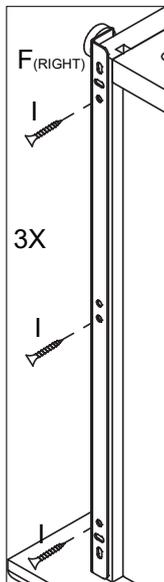


Do Not Use Power Tools

Sliderrail-B	Csk Ø3.5x16mm
 LEFT	 I
 RIGHT	
6	18


17

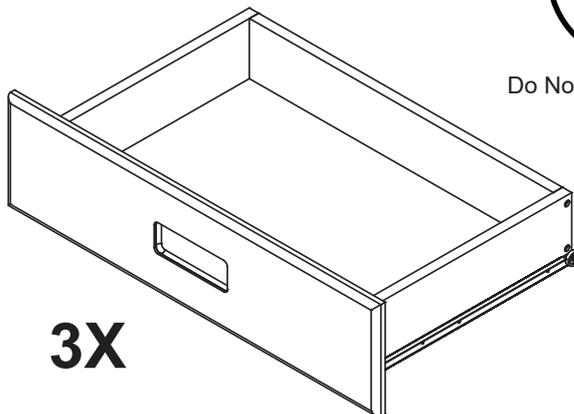

18

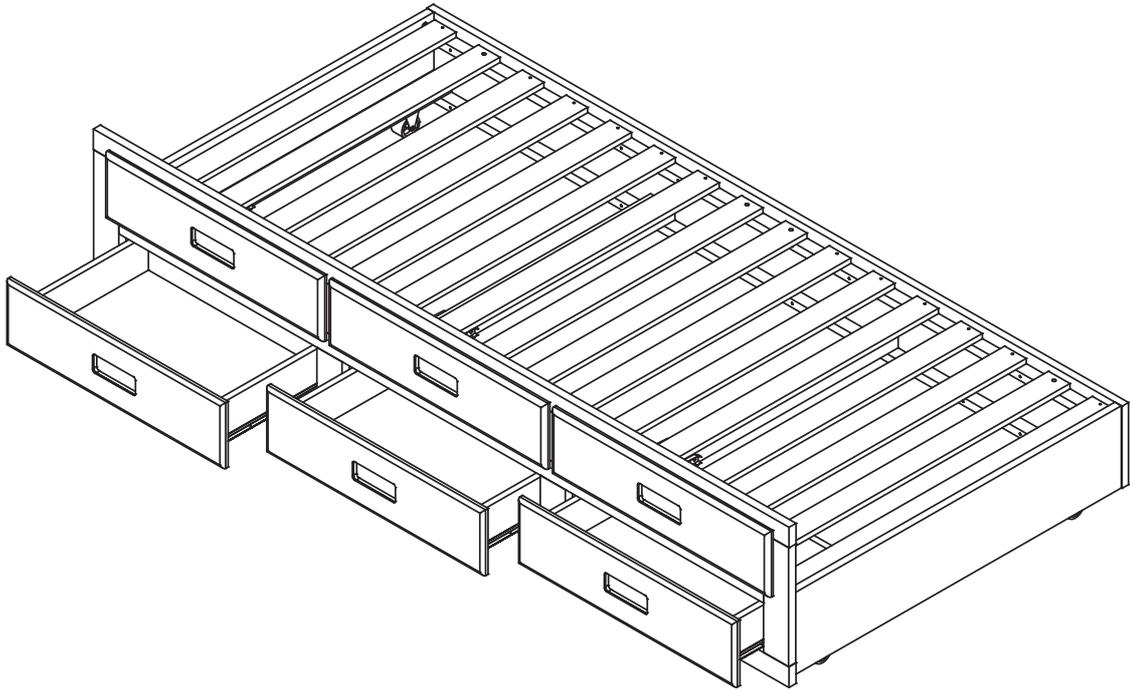

19

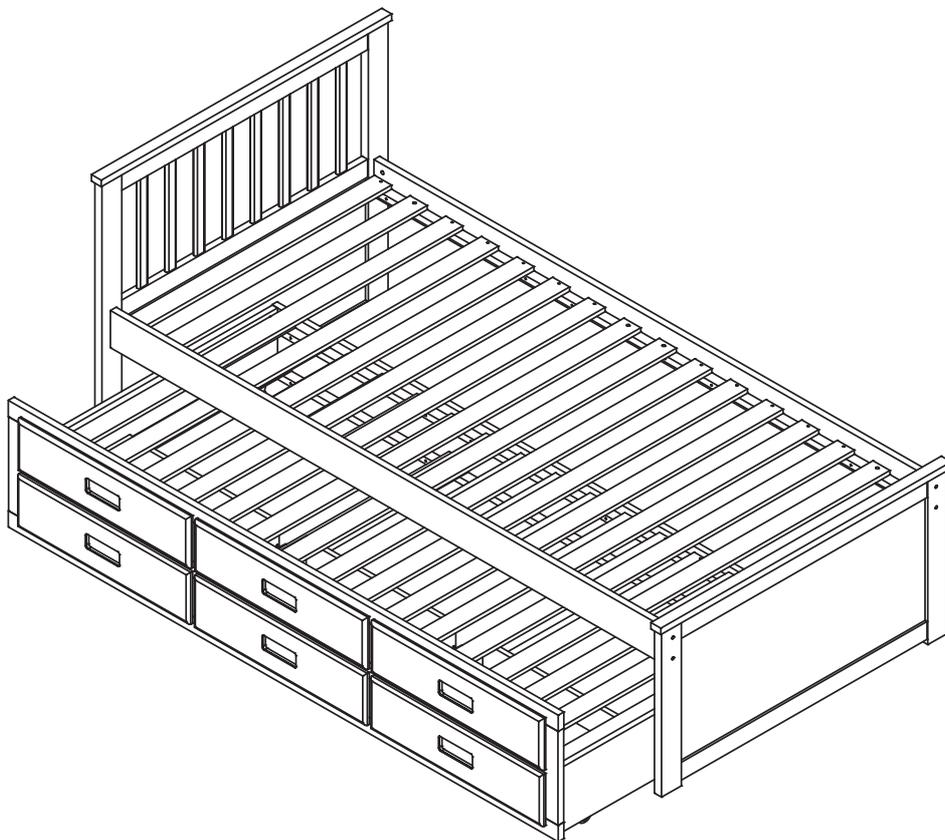

GENERAL CARE & MAINTENANCE

We advise that when cleaning the product that a damp cloth is used.

Avoid the use of all household cleaners and abrasive.

Never push or drag the furniture.

Never attempt to move the furniture when fully loaded.

We advise that periodically all fixing are re-tightened.